

M1000 Product Manual



Catalogue

1. Product Introduction	2
2. File Upload	4
3. OTDR function	6
4. Red Light Source Function	15
5. Stable Light Source Function	16
6. Optical power meter function	17
7. FLM(Fiber link map) function	18
8. Bluetooth Connection and APP	21
9. PC Software OTDRviewer	25
10. System Settings	28
11. Software Upgrade	29
12. Precautions for use	31

1. Product Introduction

1.1 Appearance

Front view:




No	Button	Description
1	Home button	Short press: Return to main menu Long press (>2s): Turn on/off flashlight
2	ON/OFF button	Long press (>2 s): Power on/off
3	Home+ON/OFF	Long press [Home+ON/OFF] button (>2 s) together to screenshot


Back view:



Top View:

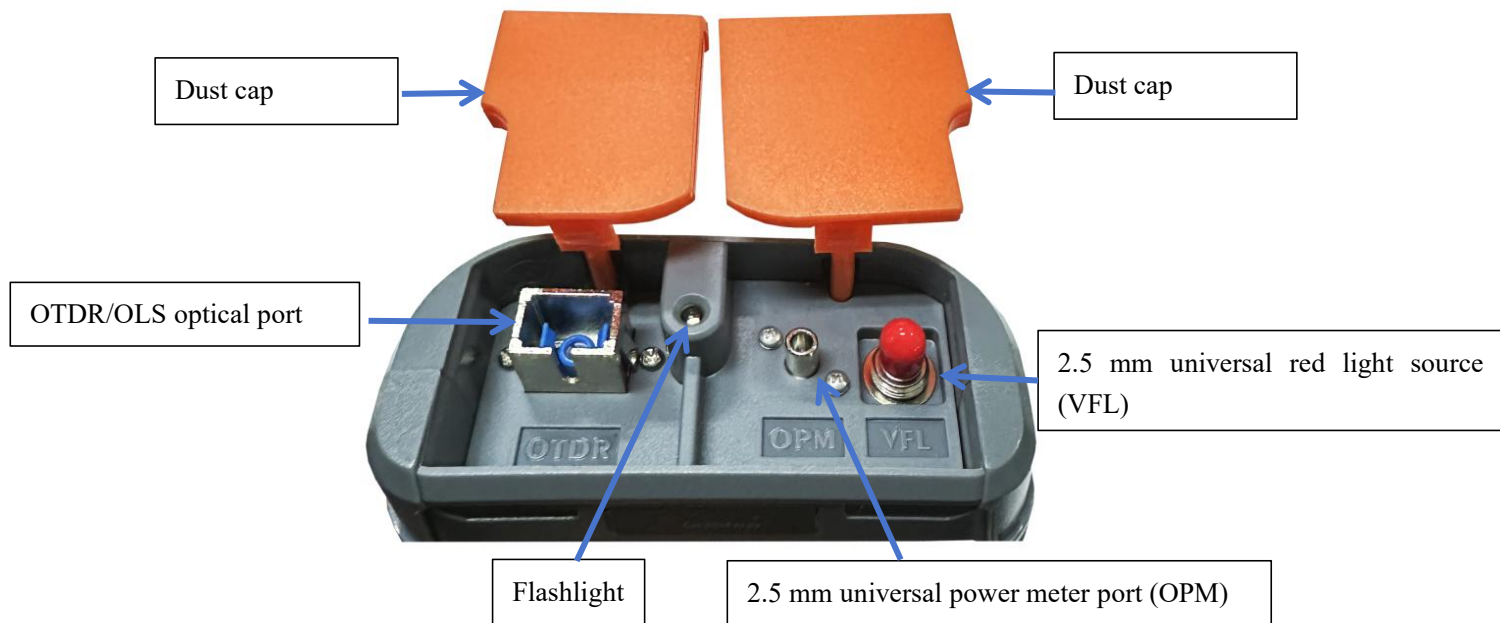


Bottom View:

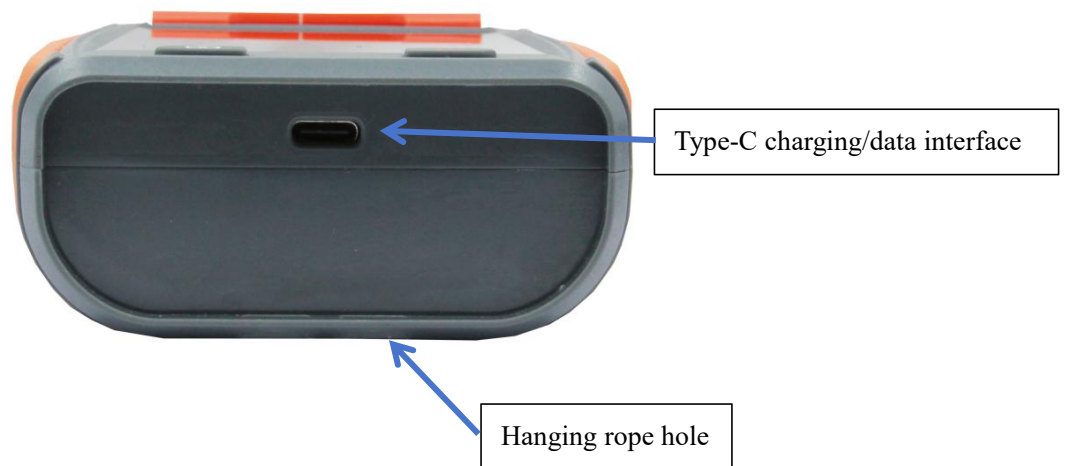

2. File Upload

2.1 Turn on the OTDR and enable the [USB Disk mode] in the SETUP.

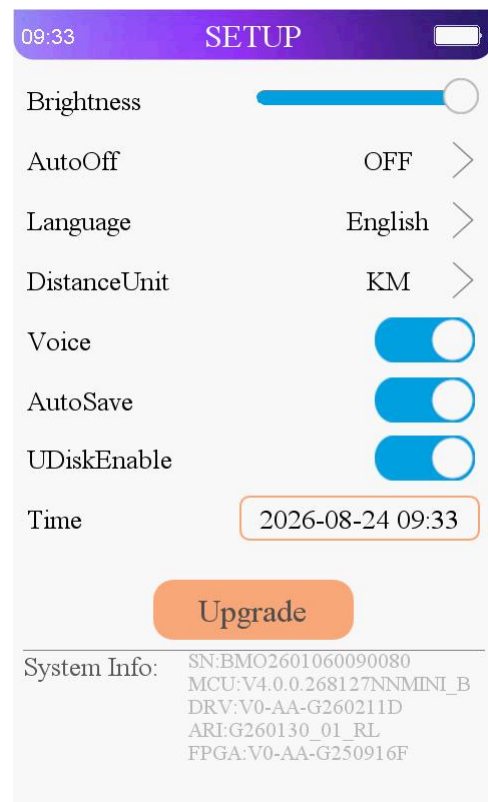

2.2 Connect the OTDR to a computer using a Type-C data cable.



2.3 There are three folders in the OTDR, then you can send sor files or sceenshots to PC.

	组织	新建	打开	选择
> 可移动磁盘 (E:)				
	名称		修改日期	类型
	UPDATE		2026/1/13 2:35	文件夹
	OTDRDATA		2026/1/17 12:40	文件夹
	DATA		2026/8/21 15:41	文件夹

[OTDRDATA]: Saved sor files

	组织	新建	打开	选择
可移动磁盘 (E:) > OTDRDATA > 2026_8_21				
可移动磁盘 (E:) > OTDRDATA >	名称	修改日期	类型	大小
	2026_3_26	2026/3/26 8:46	文件夹	
	2026_8_12	2026/8/12 10:06	文件夹	
	2026_8_14	2026/8/14 11:11	文件夹	
	2026_8_19	2026/8/19 14:29	文件夹	
	2026_8_21	2026/8/21 15:53	文件夹	
	2026_8_24	2026/8/24 10:04	文件夹	

	名称	修改日期	类型	大小
	F_1310_30m_10k_160640_34	2026/8/21 16:06	SOR 文件	20 KB
	F_1310_50m_2k_164157_40	2026/8/21 16:41	SOR 文件	9 KB
	F_1550_10m_2k_163832_36	2026/8/21 16:38	SOR 文件	9 KB
	F_1550_10m_2k_163908_37	2026/8/21 16:39	SOR 文件	9 KB
	F_1550_10m_2k_164039_38	2026/8/21 16:40	SOR 文件	9 KB
	F_1550_30m_2k_155401_32	2026/8/21 15:54	SOR 文件	9 KB
	F_1550_30m_5k_155308_31	2026/8/21 15:53	SOR 文件	11 KB
	F_1550_30m_5k_155644_33	2026/8/21 15:56	SOR 文件	11 KB
	F_1550_30m_10k_160703_35	2026/8/21 16:07	SOR 文件	20 KB
	F_1550_50m_2k_164122_39	2026/8/21 16:41	SOR 文件	9 KB
	F_1550_50m_2k_164220_41	2026/8/21 16:42	SOR 文件	9 KB

[DATA]: Saved screenshot pictures


> 可移动磁盘 (E:) > DATA > SCREENSHOT > 2026_8_24

	0933_45 BMP 图片文件 750 KB		1004_46 BMP 图片文件 750 KB
	1007_47 BMP 图片文件 750 KB		1023_48 BMP 图片文件 750 KB
	1023_49 BMP 图片文件 750 KB		1024_50 BMP 图片文件 750 KB
	1025_51 BMP 图片文件 750 KB		1025_52 BMP 图片文件 750 KB
	1026_53 BMP 图片文件 750 KB		1026_54 BMP 图片文件 750 KB
	1036_55 BMP 图片文件 750 KB		

3, OTDR function

3.1 OTDR Testing Interface

Click the OTDR module in the main menu to access the OTDR testing interface.

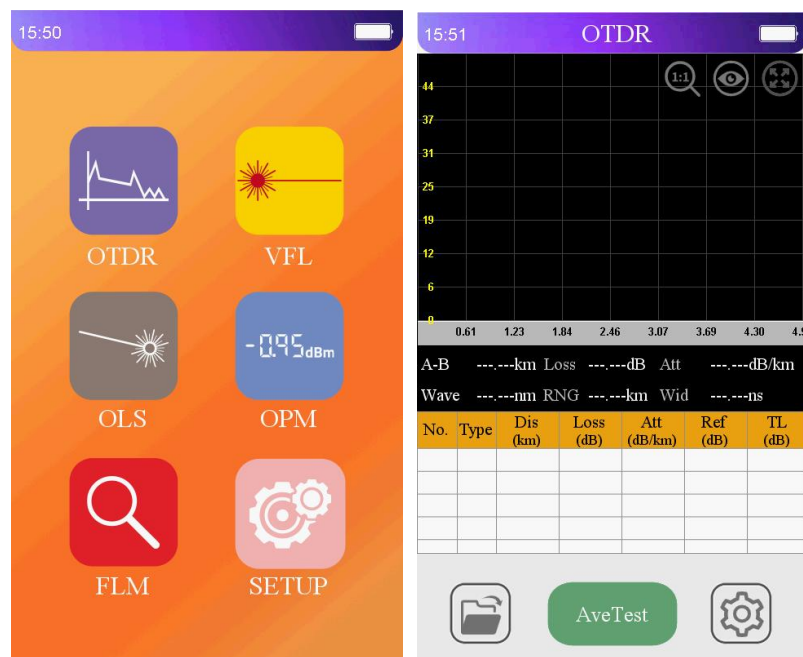

Icon	Function
	1:1 Recovery curve When the OTDR curve is zoomed in or moved, click to restore the curve to its initial position.
	Hidden Button Hide cursor A/B and curve thumbnail
	Landscape display Display OTDR curve in landscape or full-screen mode
	Wavelength switching Under 1310/1550nm testing, switch between 1310nm and 1550nm wavelengths curve
	File Menu Open the saved SOR test file.
	Parameter setting Enter the OTDR test parameter configuration interface
	Average test Click to perform an OTDR average test.
	Real-time testing Click to perform an OTDR real-time test

3.2 OTDR Parameter Configuration

Click the [Parameter setting] button to access the OTDR Test Basic Settings interface.



Item	Description
Auto	Test Mode: Auto Mode or Manual Mode Auto Mode: The device will automatically set the parameters, measurement range, and pulse width to the values best suited for the current measurement; these values cannot be modified. Manual mode: Allows for manual configuration of the measurement range and pulse width selection.
Wavelength	According to OTDR model
Range	500m, 1km, 2km, 5km, 10km, 20km, 40km, 80km, 120km
Pulse width	3ns, 5ns, 10ns, 30ns, 50ns, 100ns, 275ns, 500ns, 1us, 2us, 5us, 10us
Mode	Average Test: The Average Test mode displays an OTDR curve composed of the average values of measurements taken over a specified period. Real-time testing: Continuously tests the optical fiber link and monitors it in real time until the user clicks "Stop Test".
Time	In the average testing mode, the longer the test duration, the better the signal-to-noise ratio and the more accurate the test results will be. Users should choose the test duration appropriately. Test duration options: 5s,10s,15s,30s,60s,120s,180s
Resolution	Standard: Standard sampling points High: More sampling points, more suitable for short fiber link test

3.3 Threshold Setup

Click the **[Threshold Setup]** button to access the OTDR threshold settings interface.

In this interface, users can define pass/fail thresholds for test results. The measurement results will analyze total loss, attenuation slope, fusion loss, connector loss/reflection, and display the pass/fail status for each item. Users can modify the threshold for each item.

The image displays two screenshots of the 'ThresholdSetup' interface. The left screenshot, timestamped 15:52, shows the main configuration screen with fields for 1310nm and 1550nm wavelengths. It includes settings for Section Attenuation (dB/km), Total Loss (dB), Splice Point (Loss and Ref), and Connector (Loss and Ref). A 'Default' button is at the bottom. The right screenshot, timestamped 16:15, shows the same interface with a numeric keypad overlay for editing the 'Total Loss (dB)' value, which is currently set to 3.00. The keypad includes digits 0-9, a decimal point, a minus sign, and function keys like ESC, backspace, and OK.

3.4 Parameter Setup

Click the **[Parameter Setup]** button to access the OTDR Parameter Settings interface.

[IOR]: The refractive index parameter for optical cables is typically set to its default value; incorrect modification of this parameter can affect the distance measurement accuracy of the optical cable.


[End Threshold (dB)]: When the event's attenuation value exceeds the predefined end-of-fiber threshold, this event is considered to indicate the end of the optical fiber.

The image shows the 'ParamSetup' interface, timestamped 15:52. It features a section for 'IOR' (Refractive Index) with input fields for 1310nm (1.4650) and 1550nm (1.4680). Below this is the 'EndThreshold(dB)' setting, currently set to 5. A 'Default' button is located at the bottom of the main configuration area. A back arrow button is visible at the very bottom of the screen.

3.5 Perform OTDR test

3.5.1 OTDR Average Test

In the test settings, select the **[Average]** test mode, then click the "Average Test" button to enter the Average Test interface; the average test will then be performed according to the specified test duration.

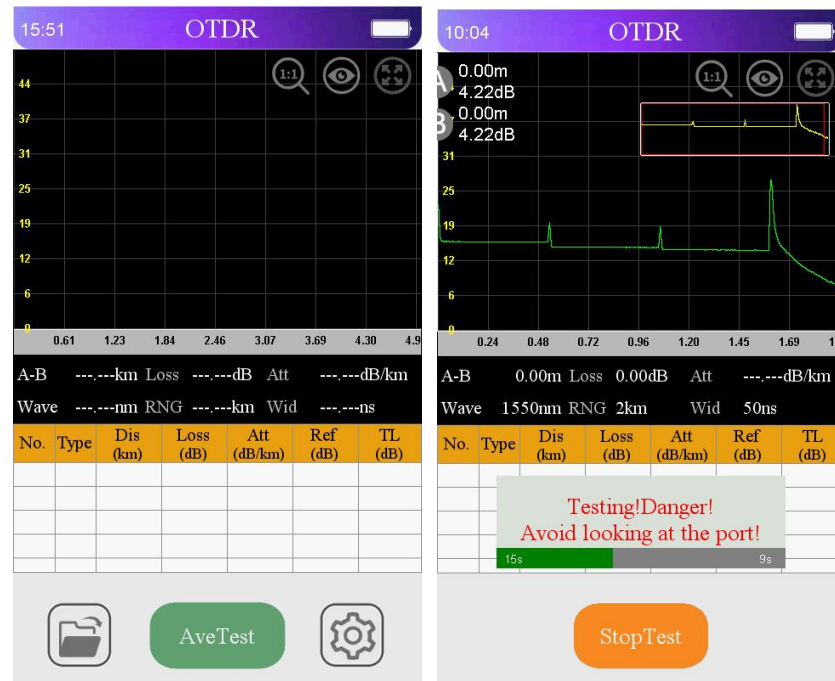

3.5.2 OTDR Real-Time Testing

In the test settings, select the **[Real-Time]** test mode, then click the "Real-Time Test" button to access the real-time test interface.

At this point, the OTDR emits continuous pulsed light for real-time fiber optic testing.



3.5.3 OTDR Test Results Interpretation



No	Item	Description
1	No	Event number
2	Type	Optical Fiber Event Types S: Start point F: Reflection event or Non-reflection event E: End point G: Ghost event G(Ghost event) is caused by strong reflection; in fact, this event point does not exist in the optical fiber line.
3	Distance (km)	The distance from the event location to the start point
4	loss(dB)	The loss value for this single event (dB) The insertion loss of the start and end points cannot be tested
5	Attenuation (dB/km)	The ratio of the attenuation value (dB) between the current event point and the previous event point to the distance (km) reflects the attenuation rate of the fiber segment.
6	Reflection(dB)	The event reflection value
7	Total loss (dB)	Cumulative loss from the event point to the start point

3.6 OTDR Curve Operation

3.6.1 OTDR Curve Marker

Marker A and B, can be moved to check the fiber optic quality between them (marker A is always positioned to the left of marker B).

When you click on a specific event in the Click Events list, marker A will automatically move to the position of that event on the curve.



3.6.2 Hidden cursor A/B and curve thumbnail


Click the [Hide] button to hide Cursors A and B as well as the curve thumbnail; click again to display them.



3.6.3 Curve Scaling and Moving

Supports multi-touch gestures to move, zooming in and out OTDR curve.

Click the "1:1" button to restore the OTDR curve.

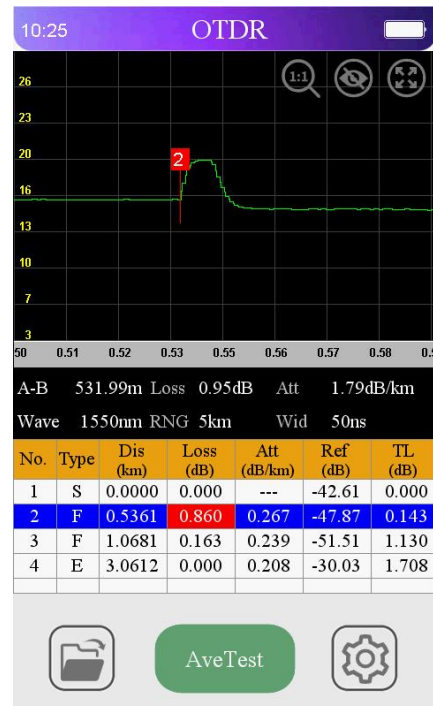


3.6.4 Landscape Display

Click the [Full Screen button] to display the OTDR curve in full-screen horizontal mode. The OTDR curve and the map will be displayed simultaneously.




3.7 1310nm/1550nm dual wavelength test

In the OTDR basic settings, the 1310nm/1550nm dual wavelength testing option can be selected. Click the wavelength switching button to switch the curve between 1310nm and 1550nm.

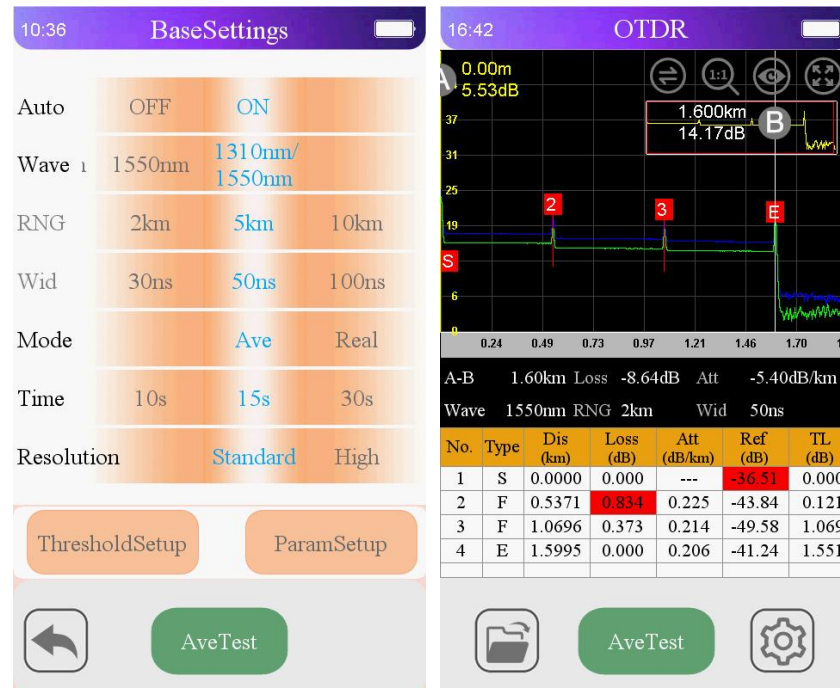


3.8 Light Warning

The M1000 regular model does not support live fiber test. If there is an optical signal in the measured fiber, an optical alarm [Light WARNING] will be prompted. OTDR Measurement needs to be stopped immediately

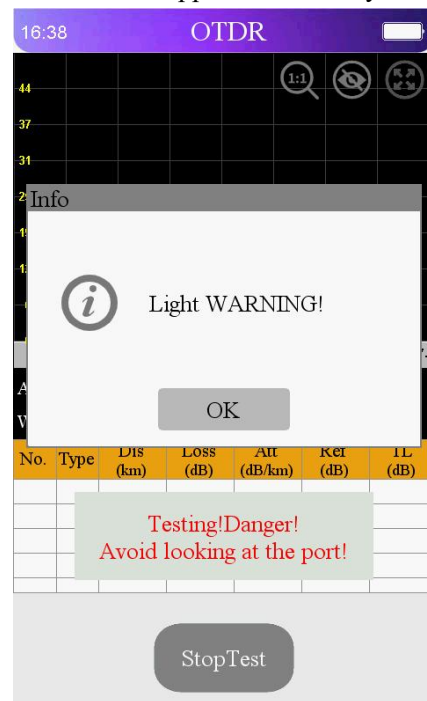

3.9 OTDR Document Management

Click the [File] button to access the SOR file management interface. If auto-save is enabled, SOR files will be saved in a folder named after the test date; otherwise, the test files will not be saved.

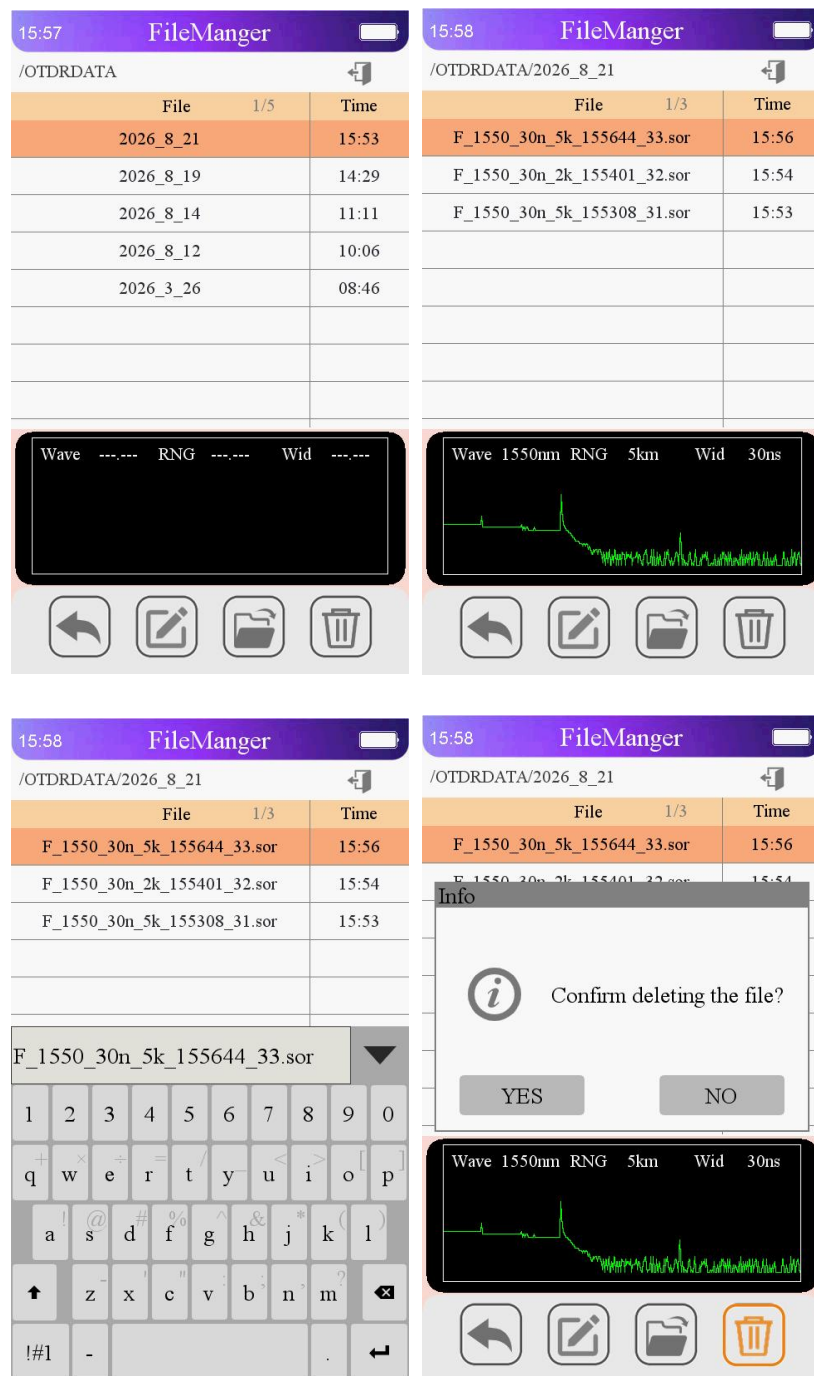

Rename the SOR file

Delete the SOR file

4. Red Light Source Function

The VFL function supports an output power of 10mW, CW mode, and 1Hz/2 Hz flashing mode.



5. Stable Light Source Function

The stable wavelength is the same as the OTDR wavelength.

Output mode supports CW/270 Hz/1 kHz/2 kHz



Modulated wave frequency output




6. Optical power meter function

The M1000 supports optical power meter function

Calibration wavelength support: 850/1300/1310/1490/1550/1625/1650 nm

Support switch display unit between [dBm] and [mW]

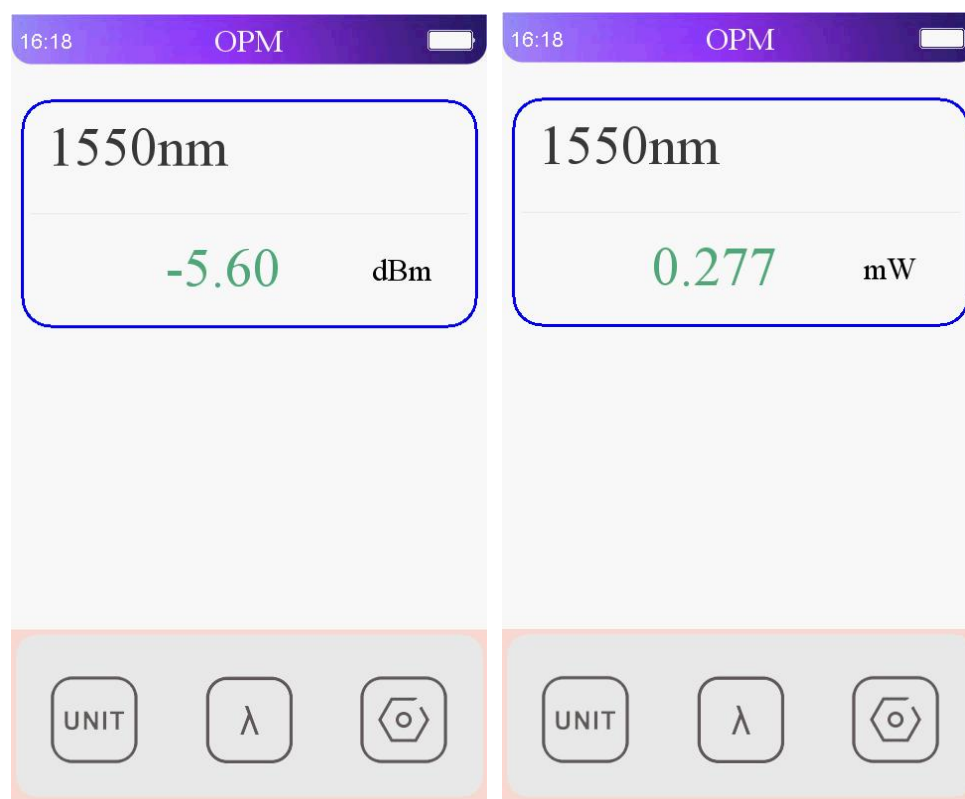

Support power deviation correction. If the measured value is larger than the actual value, a - value can be filled in the correction value, such as [-0.5dB]



Fill in correction value


Before filling in the value

After filling in the value


7. FLM(Fiber link map) function

Click the [FLM] button to access the fiber link map function.


The FLM function only requires selecting the measurement wavelength and does not require setting other measurement parameters.

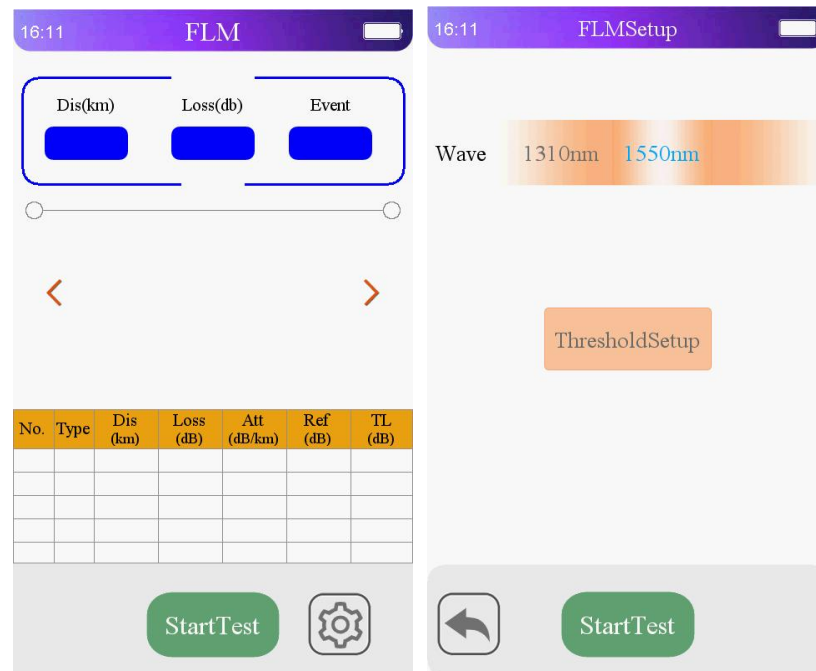

Click on threshold settings to set the threshold for pass/fail. Events that exceed the threshold will be highlighted in red, If the total loss exceeds the threshold, the overall measurement result will be displayed as a failure

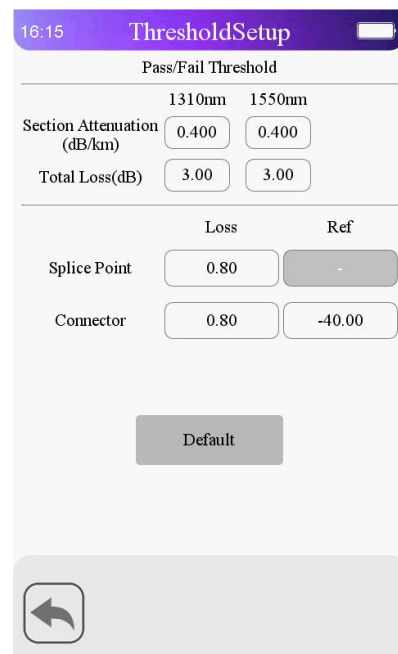


The test results will be displayed through visual icons, which are more intuitive and easy to understand.

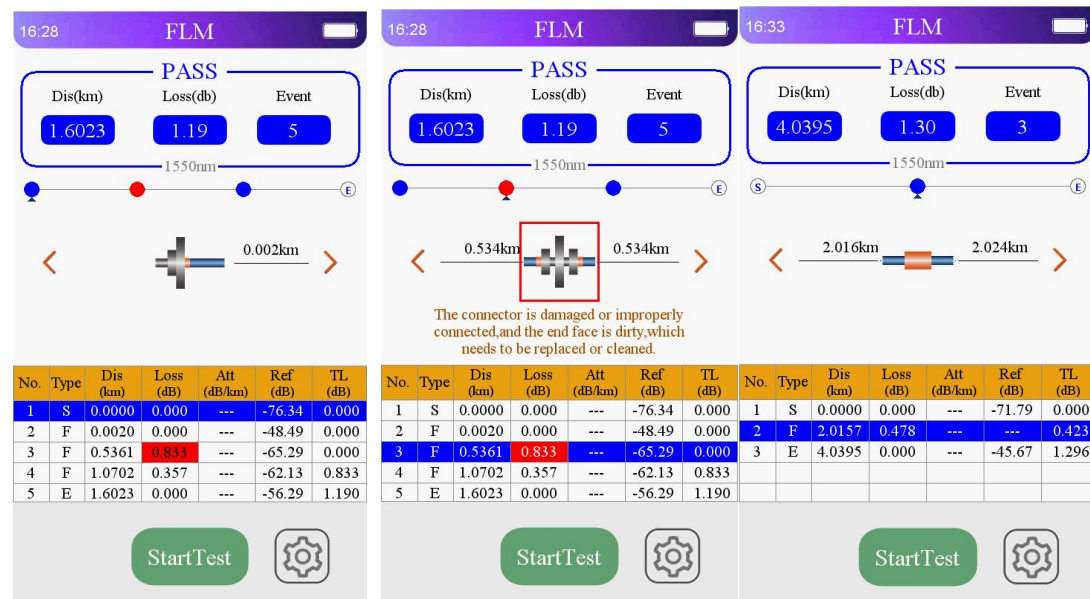

Start point

Bad connector

Fusion splice

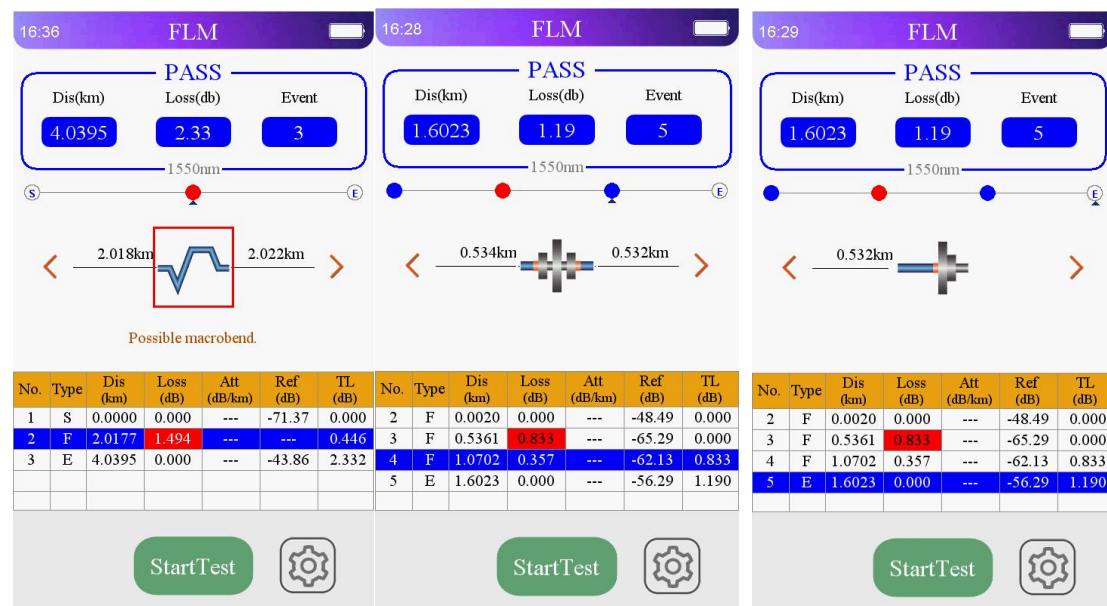


Possible fiber bending

Good connector


Fiber end

If the total loss exceeds the threshold, the overall measurement result will be displayed as a failure.

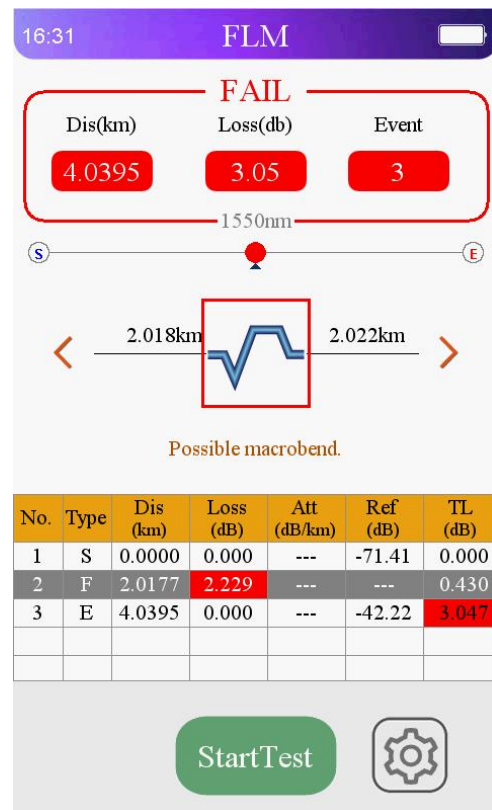

8. Bluetooth Connection and APP

Some models support Bluetooth and Android app functions, which can be used to control OTDR for testing and check SOR files inside the machine through the app.

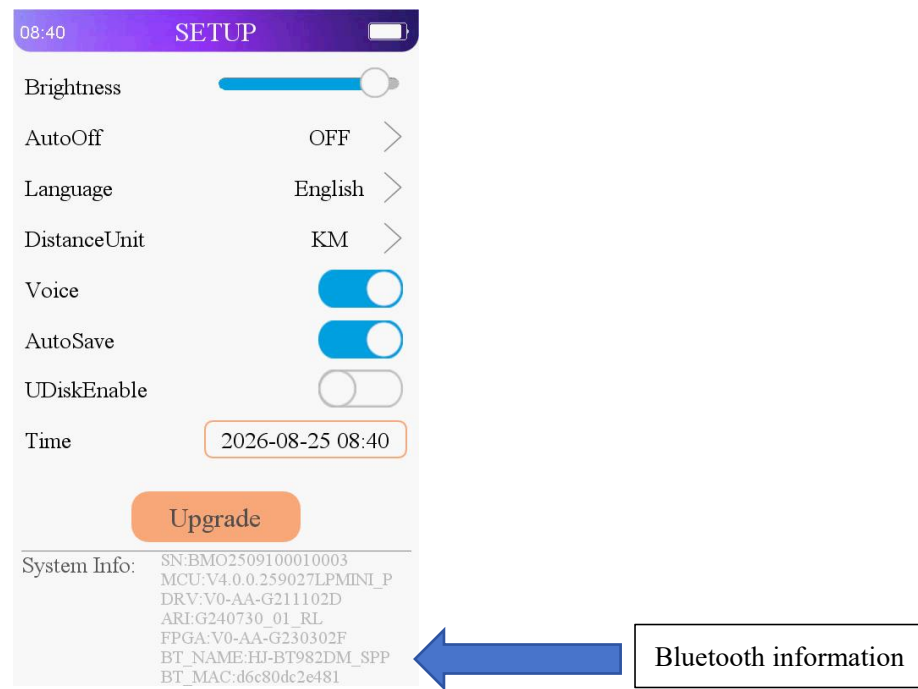

08:40 SETUP

Brightness

AutoOff OFF

Language English

DistanceUnit KM

Voice

AutoSave

UDiskEnable

Time 2026-08-25 08:40

Upgrade

System Info: SN:BMO2509100010003
MCU:V4.0.0.259027LPMINI_P
DRV:V0-AA-G211102D
ARI:G240730_01_RL
FPGA:V0-AA-G230302F
BT_NAME:HJ-BT982DM_SPP
BT_MAC:d6c80dc2e481

Bluetooth information



Mini OTDR


Android app



Mini OTDR

Connect Bluetooth


Click **【Connect Bluetooth】** and find the device bluetooth MAC address to connect.

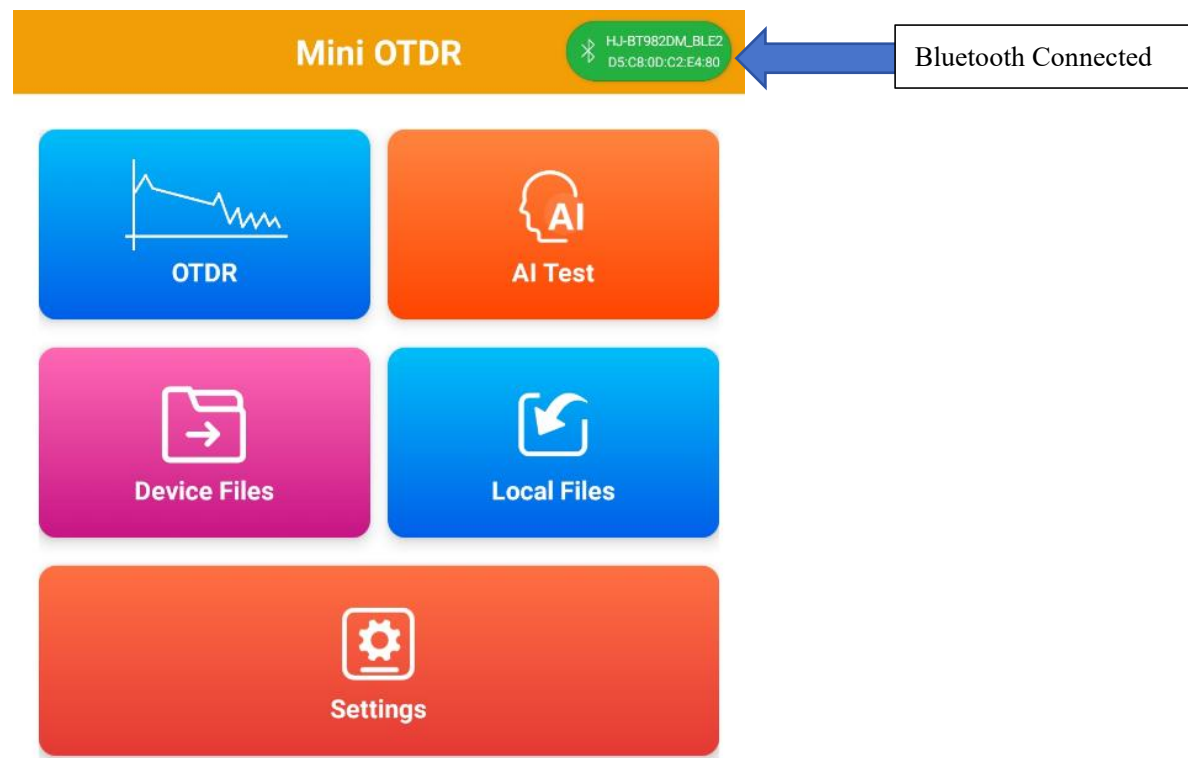

When the app is connected to the instrument, it will automatically detect the model of the device.

The following functions can be performed on the app:

- 1: OTDR control testing, including automatic testing and manual testing
- 2: FLM (Fiber link map) testing
- 3: Check the historical test sor files in OTDR, which can be opened with multiple curves and generate test PDF reports

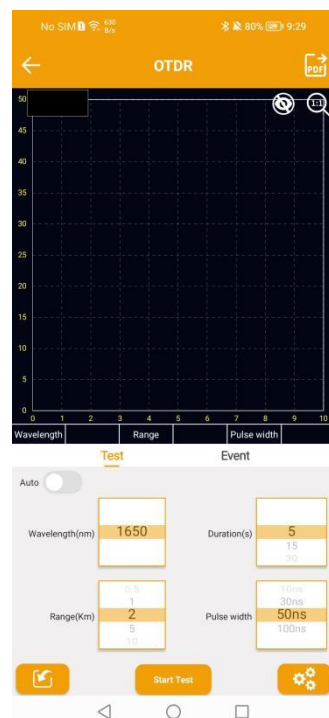


OTDR Test Setup




OTDR Test Interface




FLM Test Interface on app

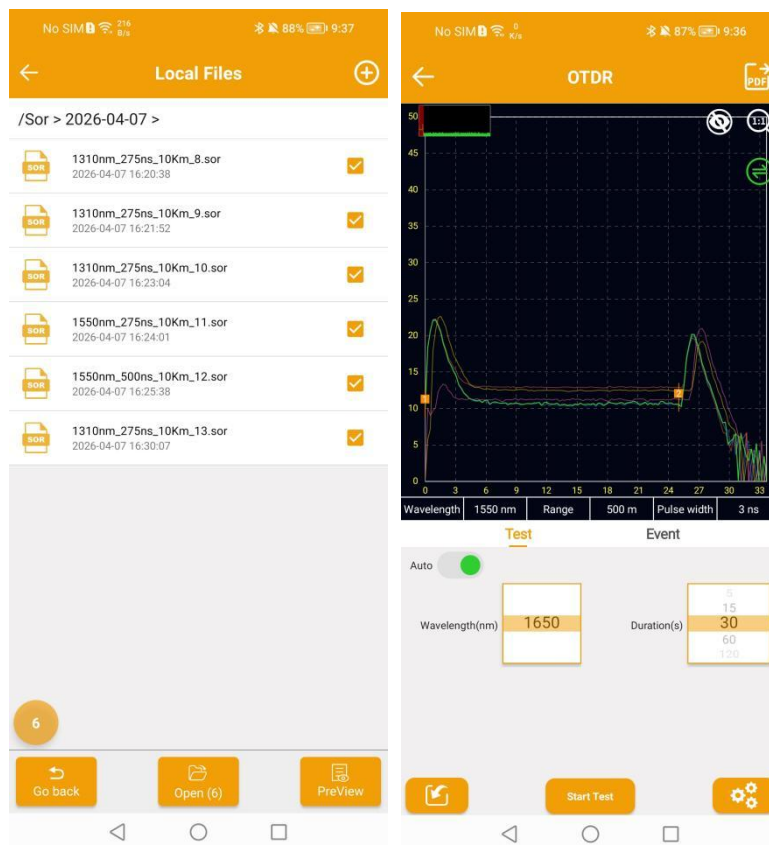

Simultaneously select multiple curves and display analysis on the same screen

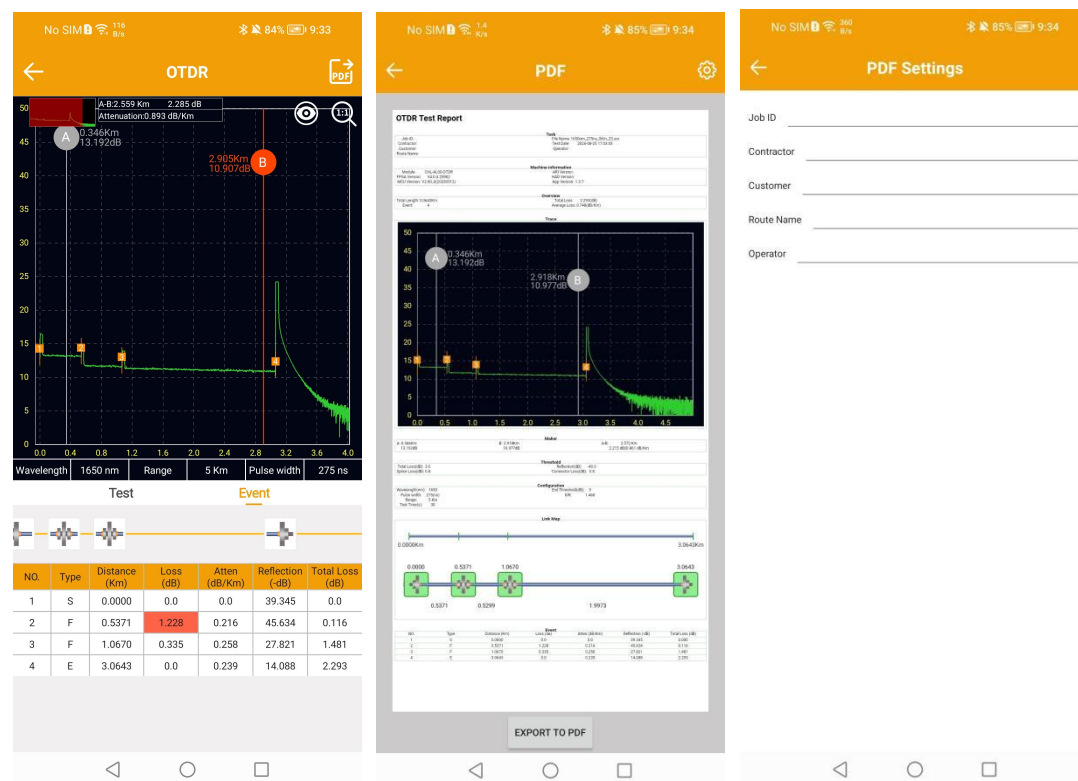



Click on the PDF icon in the upper right corner to generate a PDF report

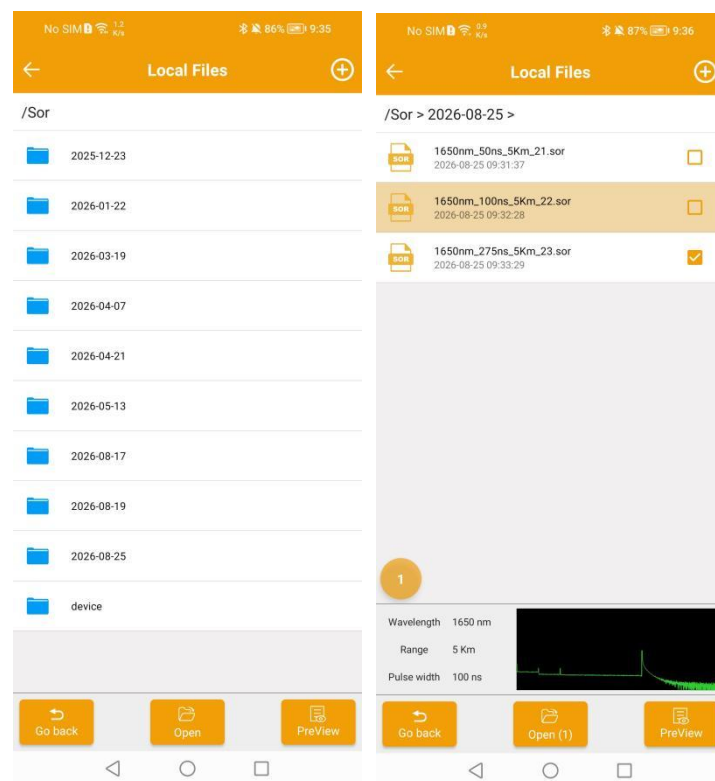


View Device SOR files through the mobile app

9. PC Software OTDRviewer



9.1 Open the PC software OTDRviewer

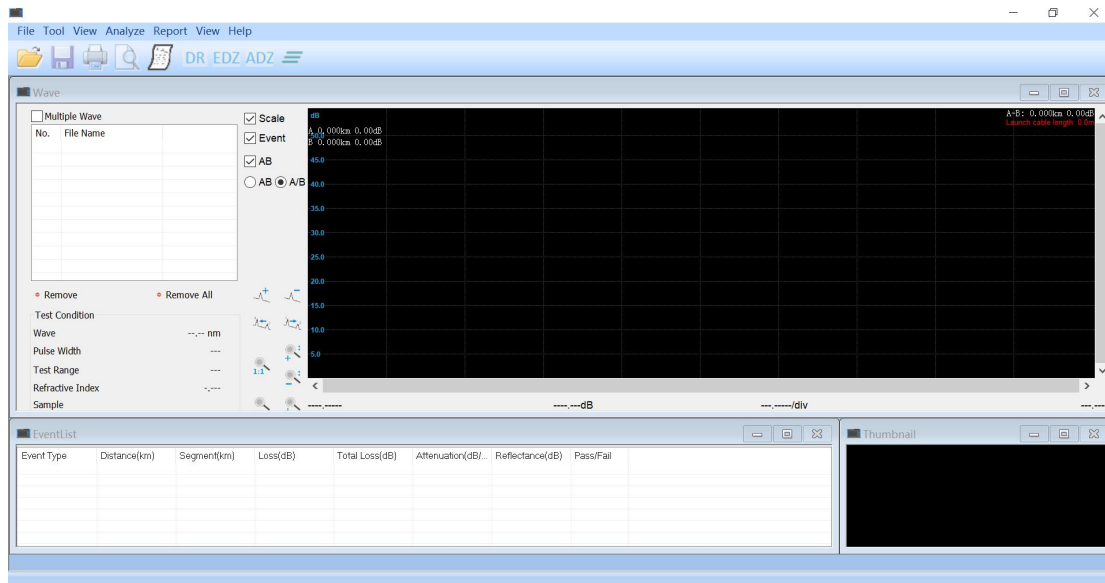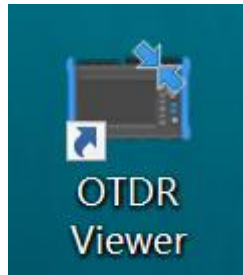

9.2 Click [File] icon to open sor file.

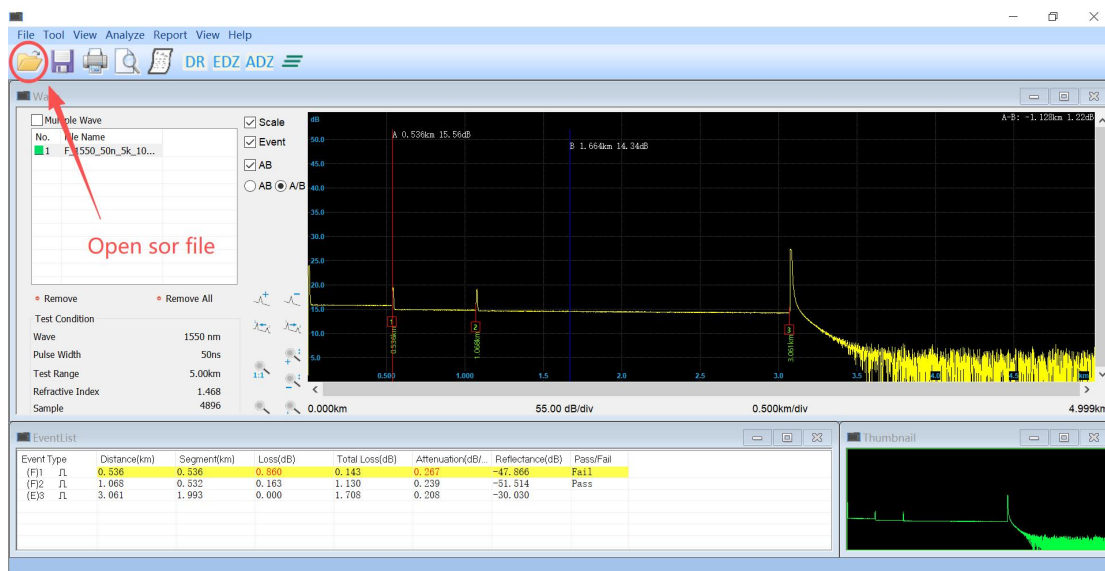

9.3 Click [File] and select [Print] button and select [Export to PDF]

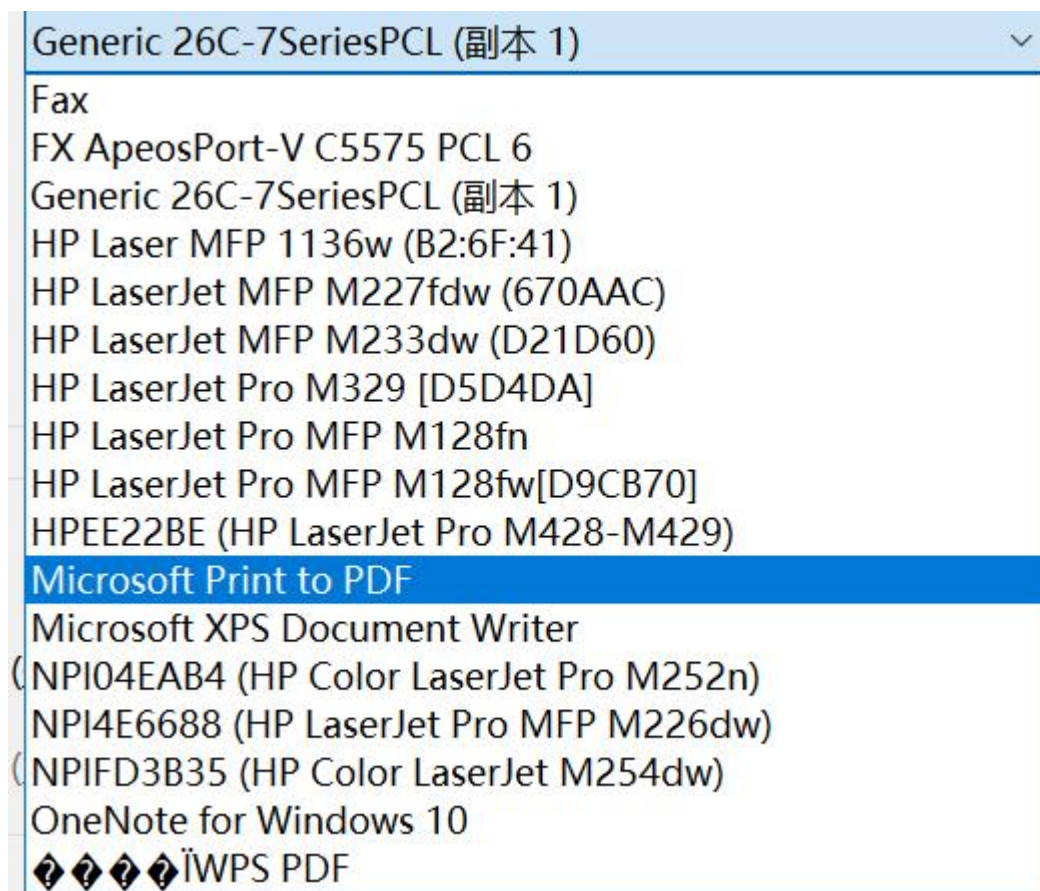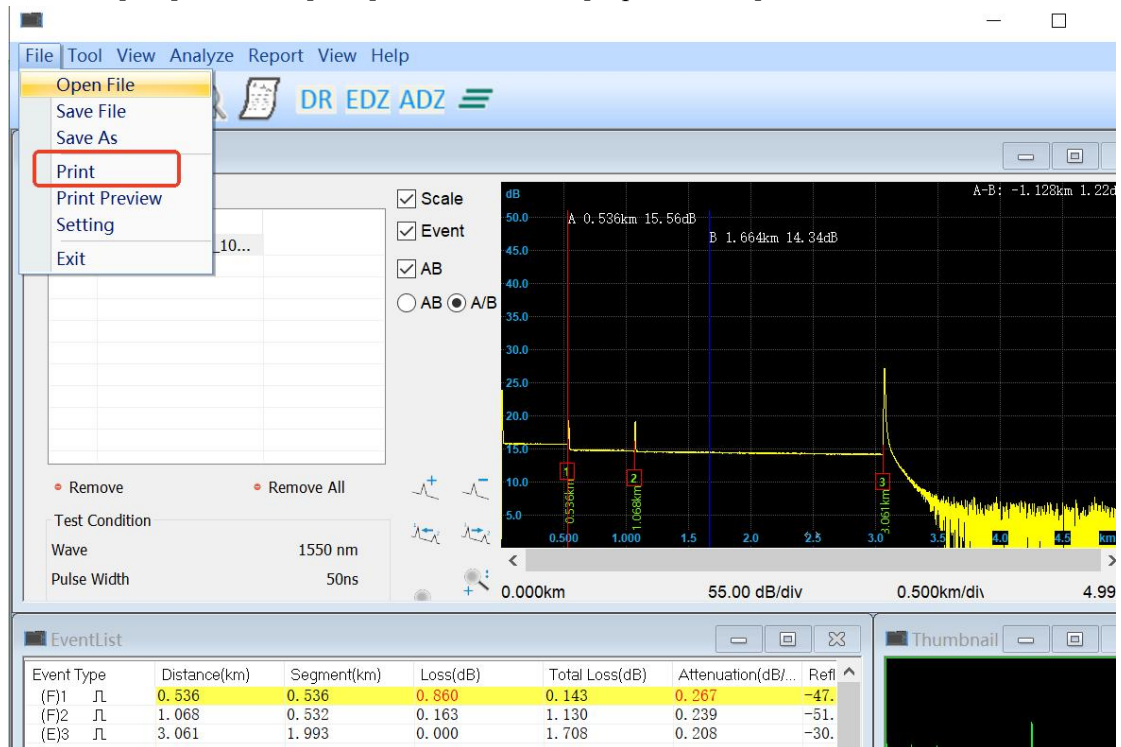

9.4 OTDR Report Sample by OTDRviewer

OTDR REPORT

2026-09-04 13:51:30

Job

Job ID : File : F_1550_50n_5k_102312_47.sor
Contractor: Date : 2026-08-24 10:23:13
Customer : SupParams Operator: Grandway

Overview


Total Fiber Length(km): 3.061
Total Fiber Loss(dB): 1.708
Average Loss(dB/km): 0.558
ORL(dB): 30.030

Configuration

Wavelength(nm)	: 1550	Loss threshold(dB)	: Auto	Origin		End	
Pulse(ns)	: 50	Reflectance threshold(dB)	: Auto	Location:	ROOMA	Location:	ROOMB
Range(m)	: 4999	End of fiber threshold	: Auto	Cable	: 144	Cable	: 144
Average Time(s)	: 15	Refractive Index	: 1.468	Fiber	: 1	Fiber	: 1
Backscatter coeff(dB)	: -81.000	Sampling Resolution(m)	: 1.021	Color	: BLUE	Color	: BLUE

Comment

Trace

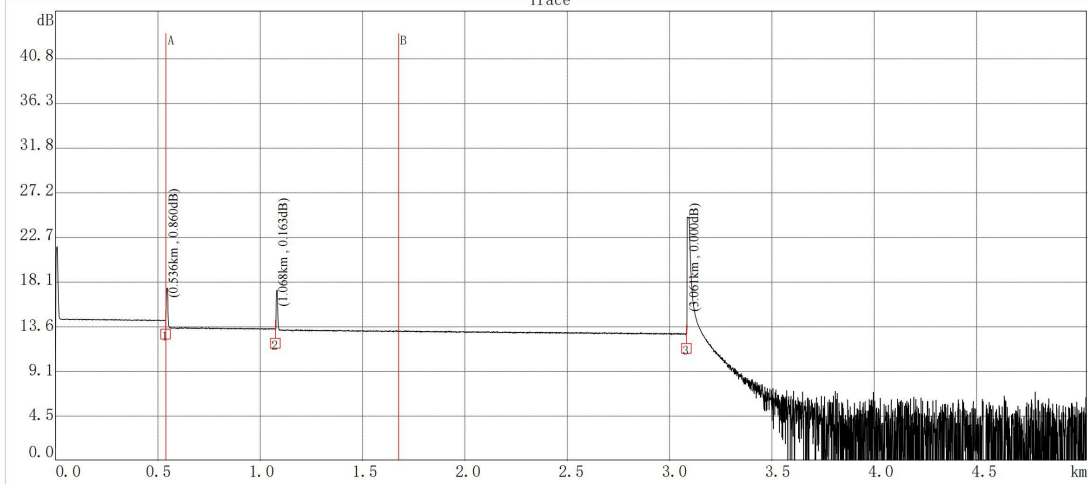

A: 0.536km 15.56dB B: 1.664km 14.34dB A-B: -1.128km 1.22dB | -1.082dB/km

Threshold

Joint Loss dB : 0.200 Reflection. dB: -40.0 Cumul. Loss dB: 10.000
Connector Loss dB: 0.800 Slope dB/km : 0.252

Event

Event Type	Distance(km)	Segment(km)	Loss(dB)	Total Loss(dB)	Attenuation(dB/km)	Reflectance(dB)	Pass/Fail
1Reflect(F)	0.536	0.536	0.860	0.143	0.267	-47.866	Fail
2Reflect(F)	1.068	0.532	0.163	1.130	0.239	-51.514	Pass
3Reflect(E)	3.061	1.993	0.000	1.708	0.208	-30.030	

Prepared By: _____

Verified By: _____

Approved By: _____

10. System Settings


Click the "System Settings" button to access the OTDR machine settings.

In the Settings menu, users can adjust screen brightness, the Auto Shutdown time(Off/5 minutes/10 minutes/30 minutes/60 minutes), language, device voice, Auto Save, USB disk, time, and software upgrade.

System information is also displayed at the bottom of the System Settings menu.




Some models also support Bluetooth function, and this interface can view Bluetooth information.

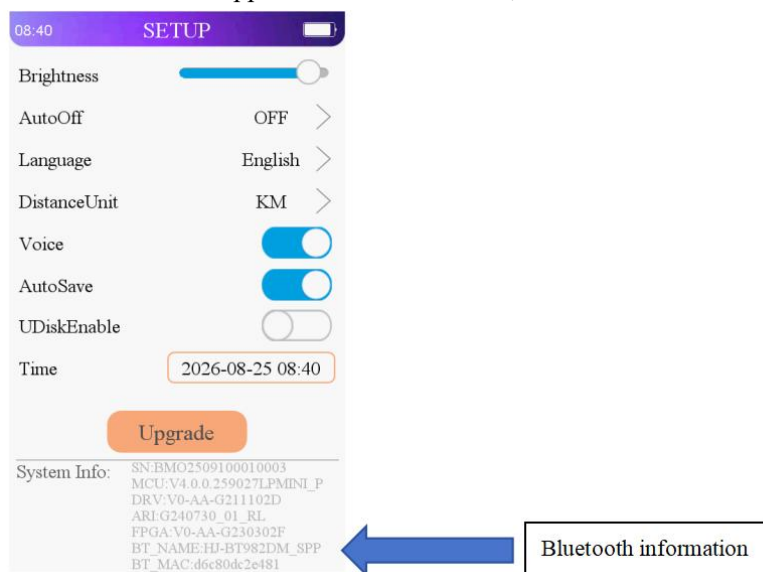

11. Software Upgrade

11.1 Turn on the OTDR and enable the [USB Disk mode] in the SETUP.

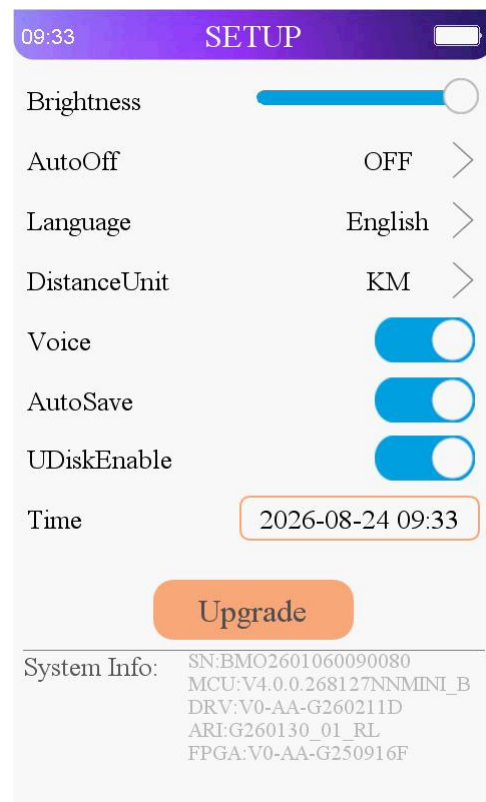

11.2 Connect the OTDR to a computer using a Type-C data cable.




11.3 Copy the upgrade file to the [UPDATE] folder to replace the old files.

U 盘 (E:)			
名称	修改日期	类型	大小
OTDRDATA	2098/1/1 0:01	文件夹	
UPDATE	2024/5/25 8:52	文件夹	

U 盘 (E:) > UPDATE			
名称	修改日期	类型	大小
RW_m_const	2024/6/21 9:47	文件	5,926 KB
ER_IROM1	2024/6/21 9:47	文件	2,327 KB

11.4 Unplug the USB cable from the computer, connect the power supply, and press the Upgrade button to update the device. Upon completion of the upgrade, the OTDR will automatically shut down.

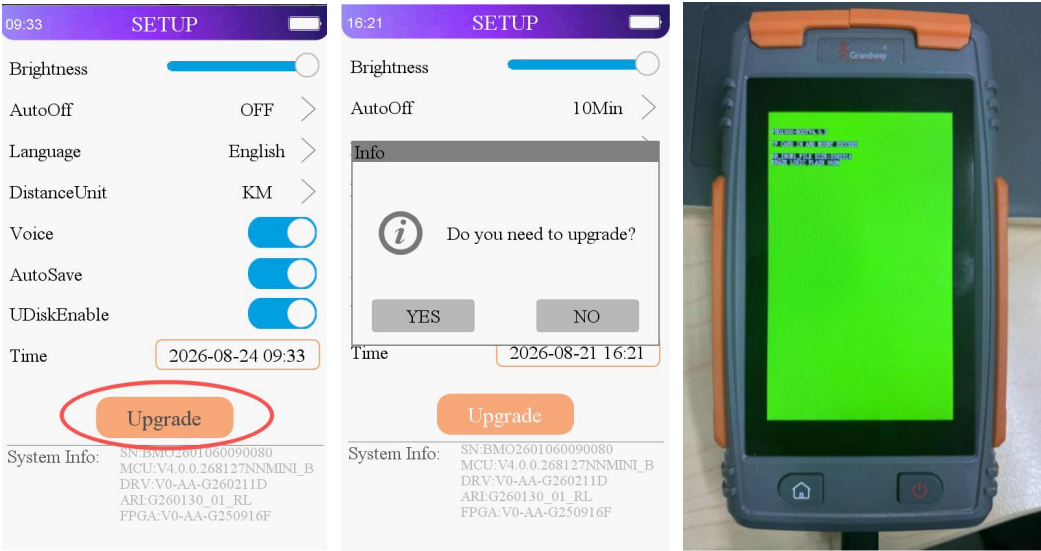

Note: The machine comes pre-installed with the latest software; therefore, a software upgrade is generally not required. If you need a software upgrade, please contact the manufacturer.

12. Precautions for use

- Be sure to use the original adapter for charging, with a specification of 5V/2A. Do not use fast charging for charging.
- Before OTDR testing, please clean the OTDR and fiber end face.
- Please do not disassemble the machine by yourself.
- Conventional OTDR models, please do not perform OTDR testing when there is an optical signal in the line.
- After use, please close the dust cover.
- Please store the OTDR in a dry and ventilated place. Regularly charge and discharge the equipment to maintain battery performance.